



Supporting Orthopaedic Implant, Surgical Instrument, and Medical Device Component Processing Coat, Spray, Screen Print, and Dip

SPEEDMASK[®] Light-Curable Removable Masking Resins for Temporary Surface Protection of Orthopaedic Implants

Solvent-Free Formulations Cures in Seconds with UV/Visible Light Peelable and Water-Soluble Grades



About DYMAX

DYMAX pioneered the development of light-curable (UV or UV/Visible) adhesives for industrial applications. With over 30 years of manufacturing experience with light-curable materials, DYMAX continues to provide manufacturers with innovative products and solutions that result in improved productivity and reduced processing costs.

A global team of technical professionals is dedicated to assisting manufacturers with product selection, dispensing options, curing recommendations, and process validation that make their manufacturing more efficient.

DYMAX understands the demands of the orthopaedic and medical device finishing market. This selector guide identifies **SPEEDMASK®** product offerings for typical applications involving chemical processes, media finishing, coatings, and manufacturing aids.

Light-curable **SpeedMask** temporary masking resins offer manufacturers the following benefits:

- The ability to cure in seconds upon exposure to UV/Visible light, enabling faster processing, greater throughput, and lower manufacturing costs
- Residue-free removal through peeling or dissolving in water
- The ability to be applied by spraying, dipping, or coating
- Full compliance with the RoHS Directives 2002/95/EC and 2003/11/EC
- Solvent free

Apply, Cure, and Remove in Seconds!



Patented Technology Advancements

See-Cure Color-Change Technology

DYMAX has answered the two most important questions in the adhesives industry:

- How do I know that a sufficient amount of masking resin has been dispensed onto my substrate?
- How do I know the maskant is fully cured?

DYMAX maskants formulated with See-Cure technology start out bright blue in their uncured state, making them highly visible on substrates. During the light-curing process, the blue color transitions to pink indicating that sufficient light energy was received, providing a visual indication that the material is fully cured. This visual cure-indicator may initially be used to qualify the process, and then be used to ensure that the process remains within the qualified parameters. Visit www.dymax.com/seeitcure for more information.

<u>Table of Contents</u>	<u>Page</u>
CHEMICAL PROCESSES	
▪ Anodizing	3
▪ Plating	4
▪ Chemical Milling	5
COATINGS	
▪ Air Plasma Spray	6
▪ Painting and Powder Coating	7
MEDIA FINISHING	
▪ Grit Blasting	8
▪ Shot Peening	9
▪ Vibratory Finishing	10
PARTS HANDLING	
▪ General Masking	11
MANUFACTURING AIDS	
▪ Machining	11
CURING EQUIPMENT	12

Chemical Processes – ANODIZING

SpeedMask® light-curable masking resins provide superior surface protection during the anodizing of orthopaedic implants, surgical instruments, and other medical devices.

SpeedMask resins have been formulated with more chemical resistance for better surface protection from the strong acids used in the anodizing process. The cured maskant protects the substrate surface while the oxide layer of coating (which is designed to change the microscopic texture of the component surface), is being applied.

SpeedMask resins can tolerate most Type I (Chromic Acid), Type II (Sulfuric Acid), or Type III (Hardcoat) anodizing processes.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for ANODIZING Processes

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Chemical Processes – PLATING

SpeedMask® light-curable masking resins provide superior surface protection of orthopaedic implants, surgical instruments, and other medical devices during various plating processes.

SpeedMask resins have been formulated with chemical and heat resistance to protect masked areas during plating processes where particles are deposited onto conductive surfaces. These resins are able to withstand the most common plating processes such as Electroless Nickel (Ni), Platinum (Pt), Chrome (Cr), Gold (Au), Silver (Ag), and Copper (Cu).

SpeedMask temporary masking resins are available in low, moderate, and high levels of adhesion to accommodate the various operating temperatures of plating baths. The higher the temperature of a plating process, the higher the maskant adhesion will need to be. The higher the pH of a plating mask, the greater the need for a chemical-resistant maskant.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for PLATING Processes

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**
731	UV/Visible light curing; high adhesion; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable; high-visibility yellow color	18,000	D50	2.0%	86 [12,600]	15 seconds
733	UV/Visible light curing; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable	25,000	D50	2.7%	9 [1,320]	1 second

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Chemical Processes – CHEMICAL MILLING

SpeedMask® resins provide superior surface protection during the chemical milling of orthopaedic implants, surgical instruments, and medical devices.

SpeedMask resins have been formulated with enhanced chemical resistance for reliable protection from strong acids and alkalis used in dissolving metal substrates during chemical milling. **SpeedMask** 730-BT can be trimmed to provide defined edge boundaries and accommodate the most complex and intricate components while still providing excellent protection with no leakage.

These resins were developed to withstand the typical 200° F+ Nitric Acid (HNO₃) and Hydrofluoric Acid (HF) solutions used for the chemical milling of titanium components.

SpeedMask resins were also developed to withstand typical Sodium Hydroxide (NaOH) and Potassium Hydroxide (KOH) solutions used for the chemical milling of aluminum components.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for CHEMICAL MILLING Processes

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Easily apply, cure, and remove **SpeedMask** resins from orthopaedic implants!



Spray resin onto knee implant



Cure masked knee implants in seconds in DYMAX conveyor



Remove cured mask by peeling

Coatings – AIR PLASMA SPRAY – THERMAL BARRIER COATINGS

SpeedMask[®] light-curable masking resins provide superior surface protection of orthopaedic implants, surgical instruments, and other medical devices during thermal barrier coating processes, such as air plasma sprays.

SpeedMask resins have been formulated to be resistant to the aggressive force and heat of flame-spray processes. The cured maskant absorbs the energy from the force of plasma spray materials, such as zirconium, Molybdenum (used for thermal protection), Tungsten Carbide, or ceramics used for

wear-resistant coatings. As the melted particles from the flame spray are deposited onto the substrate, the cured resin protects the masked surface underneath.

The aggressiveness of the flame-spray process, and the adhesion needed to protect a substrate surface, must be considered when choosing a masking resin.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK[®] Light-Curable Temporary Masking Resins for AIR PLASMA SPRAY - THERMAL BARRIER COATINGS

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
731	UV/Visible light curing; high adhesion; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable; high-visibility yellow color	18,000	D50	2.0%	86 [12,600]	15 seconds
733	UV/Visible light curing; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable	25,000	D50	2.7%	9 [1,320]	1 second

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

Coatings – PAINTING and POWDER COATINGS

SpeedMask® light-curable masking resins provide superior surface protection of surgical instruments and medical devices during paint and powder-coating processes.

SpeedMask resins have been formulated to be resistant to the heat and chemical exposure during paint and powder-coating processes.

Cured maskants are easily removed from the substrate following the completion of the process, leaving a residue-free surface.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for PAINTING and POWDER COATINGS

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

Media Finishing – GRIT BLASTING

SpeedMask® light-curable masking resins provide superior surface protection of orthopaedic implants, surgical instruments, and medical devices during grit-blasting surface treatment.

SpeedMask resins have been developed to be resilient to sharp particles and the pressure used in blasting applications. The cured maskant provides reliable protection from sharp particles such as aluminum oxide, garnet, plastics, and organic media. The cured resin absorbs the energy from the air stream blast, while the media bounces off the masked surface and protects the surface underneath.

Selection of the best **SpeedMask** resin to use depends on the blast velocity (psi or bars), as well as the media particle size (grit). Another factor to consider is the surface texture of the component. Smooth surfaces require high-adhesion masks, while rough surfaces require lower-adhesion masks.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for GRIT BLASTING

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
724	Next generation formulation; UV/Visible light curing; low adhesion; good protection during low-pressure blasting; easy removal; clear in appearance	70,000	D40	24%	2.7 [390]	15 seconds
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**
731	UV/Visible light curing; high adhesion; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable; high-visibility yellow color	18,000	D50	2.0%	86 [12,600]	15 seconds
733	UV/Visible light curing; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable	25,000	D50	2.7%	9 [1,320]	1 second

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Media Finishing – SHOT PEENING

SpeedMask[®] light-curable masking resins provide superior surface protection of orthopaedic implants, surgical instruments, and medical devices during the shot-peening, plastic-deformation surface treatment process.

SpeedMask resins have been developed to be resistant to various peening media and the pressures used in peening applications. Cured maskant provides reliable protection from peening media particles, such as cut wire, round metal or ceramic particles, and glass beads. The cured resin absorbs the energy from the ball-peen hammer effect of the media blast, while the

media bounces off the masked surface, protecting the area underneath.

Selection of the best **SpeedMask** masking resin to use depends on the shot velocity (psi or bars), as well as the media type and particle size. Another factor to consider is the surface texture of the component. Smooth surfaces require high-adhesion masks, while rough surfaces require lower-adhesion masks.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating

 **SPEEDMASK**[®] Light-Curable Temporary Masking Resins for SHOT PEENING

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
724	Next generation formulation; UV/Visible light curing; low adhesion; good protection during low-pressure blasting; easy removal; clear in appearance	70,000	D40	24%	2.7 [390]	15 seconds
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**
731	UV/Visible light curing; high adhesion; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable; high-visibility yellow color	18,000	D50	2.0%	86 [12,600]	15 seconds
733	UV/Visible light curing; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable	25,000	D50	2.7%	9 [1,320]	1 second

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Media Finishing – VIBRATORY FINISHING

SpeedMask® light-curable masking resins provide reliable surface protection of intricate and complex configurations during vibratory finishing operations such as slurry, tumbling, or deburring.

SpeedMask resins have been formulated to withstand the compound solution (soap, water, or alternative cleaning/polishing agents) and abrasion from ceramic, plastic, or steel media while vibrating during the finishing process.

Selecting the best **SpeedMask** masking resin to use depends on the amount of adhesion needed to protect the surface underneath the mask during the process. The stronger the vibration or abrasion is, the higher the adhesion of the maskant needs to be for reliable protection.

- Cured in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK® Light-Curable Temporary Masking Resins for VIBRATORY FINISHING

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
724	Next generation formulation; UV/Visible light curing; low adhesion; good protection during low-pressure blasting; easy removal; clear in appearance	70,000	D40	24%	2.7 [390]	15 seconds
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Parts Handling – GENERAL MASKING

SpeedMask[®] light-curable masking resins provide superior surface protection of orthopaedic implants, surgical instruments, and medical components from FOD (foreign object damage) during the manufacturing process, handling, and transportation.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK[®] Light-Curable Temporary Masking Resins for GENERAL MASKING

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
726-SC	Next generation formulation; UV/Visible light curing; moderate adhesion; easy to remove; excellent protection during moderate pressure blasting; See-Cure technology resin transitions from blue to pink upon sufficient exposure to light energy	45,000	D40	20%	3.9 [560]	8 seconds
728-G	Next generation formulation; UV/Visible light curing; high adhesion; easy removal after hot-water soak; superior product with excellent surface protection to aggressive chemical processes; high-visibility green color	25,000	D55	2.1%	83 [12,000]	10 seconds
730-BT	UV/Visible light curing; moderate adhesion; easy to remove; excellent surface protection and chemical resistance; trimmable after cure; high-visibility blue color	20,000	D35	0.3%	16 [2,444]	4 seconds**

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)

**Mercury-vapor bulb, DYMAX part number 36970

Manufacturing Aids – MACHINING

SpeedMask[®] light-curable masking resins provide excellent protection during machining (milling, grinding, turning) orthopaedic implants, surgical instruments, and medical devices.

The durability of the cured resins allows the maskants to be machined through, without any lifting of the remaining masks, while continuing to provide reliable protection of the masked surfaces.

SpeedMask temporary masking resins can withstand various water-soluble and oil-based coolants used in machining.

- Cures in seconds enabling faster processing, greater output, and lower processing costs
- Residue-free removal
- Applied by spraying, dipping, or coating



SPEEDMASK[®] Light-Curable Temporary Masking Resins for MACHINING

Product	Features and Benefits	Nominal Viscosity, cP [mPa] (20 rpm)	Shore Hardness	24-Hour Water Absorption	Modulus of Elasticity MPa [psi]	Cure Time *
Peelable						
733	UV/Visible light curing; easy removal after hot-water soak; excellent surface protection to aggressive chemical processes; sprayable	25,000	D50	2.7%	9 [1,320]	1 second

*Cure time based upon DYMAX 5000-EC Light-Curing Flood Lamp System (200 mW/cm²)


Light-Curing Systems – FOR *SPEEDMASK*[®] TEMPORARY MASKING RESINS

Successful light-cure processing demands that the curing equipment be matched to the resin to optimize both performance and cost savings. DYMAX manufactures both light-curable resins and UV light-curing equipment, and specializes in optimization of UV light-curing processes.

Our technical specialists are ready to help you optimize your process and maximize your profit and product performance. For resin and equipment selection assistance, please call the DYMAX Applications Engineering Department.



5000 UV Light-Curing Flood Lamp Systems with shutter and protective enclosure. Ideal for single component or batch curing processes requiring moderate intensity and a 5" x 5" (12.7 cm x 12.7 cm) cure area. **CE Marked**. PC Series Flood Systems available for European production facilities.

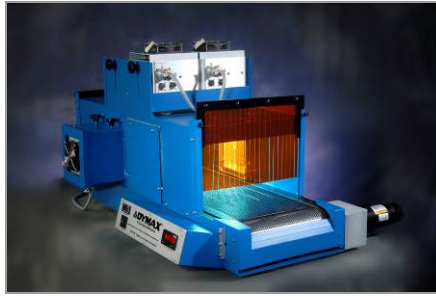

UV Light-Curing Conveyor Systems are ideal for providing consistent curing for high-volume and high-speed assembly. UVCS conveyors are available for curing inks, coatings, and adhesives. SideCure™ conveyors provide 180° curing for high-volume and high-speed assembly.



PORTA-RAY[®] 400 Curing System Portable hand-held UV curing system with effective curing width of 5" x 3" (12.7 cm x 7.6 cm).



BlueWave[®] 200 UV Light-Curing Spot Lamp with patent pending intensity adjustment feature provides high-intensity UV/Visible light in a concentrated area. Ideal for integration with automated equipment and multiple output light-guides. **CE Marked**.



Lightguide Stand Keeps Lightguide Stationary Log onto www.dymax.com for more information on this and other DYMAX UV light-curing equipment accessories.



ACCU-CAL™ 50 Radiometers are perfect for process monitoring of spot and flood UV light-curing systems. **CE Marked**.

© 2008-2011 DYMAX Corporation, All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by DYMAX Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. DYMAX does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in DYMAX's standard Conditions of Sale. DYMAX does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than DYMAX or act as a grant of license under any DYMAX Corporation Patent. DYMAX recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide. LIT170DA 6/6/2011

DYMAX Corporation
860.482.1010
info@dymax.com
www.dymax.com

DYMAX Europe GmbH
+49 (0) 611.962.7900
info_de@dymax.com
www.dymax.de

DYMAX UV Adhesives & Equipment (Shenzhen) Co Ltd
+86.755.83485759
dymaxasia@dymax.com
www.dymax.com.cn

DYMAX Asia (Hong Kong) Ltd
+852.2460.7038
dymaxasia@dymax.com
www.dymax.com.cn

DYMAX Korea LLC
82.2.784.3434
info@dymax.kr
www.dymax.co.kr

